

LANTERN INSTRUCTIONS

- 1) Rotate the lantern base counter-clockwise and remove the battery holder.
- 2) Insert 4 "D" batteries into the battery holder and replace lantern base.
- 3) Rotate ON/OFF switch clockwise, and adjust to desired brightness level.

IMPORTANT NOTES: Never use both power sources simultaneously. Remove batteries if using optional AC power source. Remove batteries if not in use for a prolonged period of time.

The LED bulbs are not replaceable. Do not attempt to open the light housing as this may cause permanent damage to the unit. Never leave lantern outdoors for prolonged periods, or in bad weather. Keep out of the reach of children.