




Auto-Count Digital Coin Bank



Instruction Manual

• BATTERY INSTALLATION

"AAA" batteries (x2)
(not included)

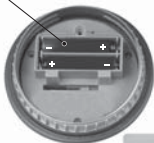

Battery Compartment Cover

Remove the battery compartment cover with a phillips screwdriver.
Insert 2 "AAA" batteries (not included) with the polarity as shown in the image above.
Replace the battery compartment cover, tighten the screw.



CAUTION:

- The Coin Bank display memory stays for only 15 seconds after the batteries are removed.
- Have 2 new "AAA" batteries ready before removing the batteries.

BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose batteries in a fire - batteries may leak or explode.

KEEP THIS MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

Hong Kong Patent No. 1083715
China Patent No. ZL200420108809.8
China Patent No. 200830054685.3

Made for MerchSource, LLC under trademark license from Emerson Radio Corp.
EMERSON AND EMERSON AND THE G-CLEF LOGO ARE TRADEMARKS AND/OR REGISTERED TRADEMARKS OF
EMERSON RADIO CORP., PARSIPPANY, NJ, U.S.A

©2009 MerchSource, LLC, All Rights Reserved.
Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

Printed in China