



PET LEASH INSTRUCTIONS

The Pet Leash automatically locks the cord when the trigger is in the resting position.

TO RELEASE THE LEASH AND EXTEND THE LEAD: Simply pull and hold the trigger while pulling on the lead until the leash reaches the desired length. The leash will be automatically locked when you release the trigger.

TO RETRACT THE LEASH:

Pull the trigger again when there is no tension on the leash and it will automatically return.

TO LOCK THE TRIGGER:

Slide the locking mechanism to the left above the trigger. You can only slide the locking mechanism by pulling on the trigger. This option will release the leash with no lock.

Note: Only small pet waste bags will fit in the bag holder.

©2010 Discovery Communications, LLC. Animal Planet and the Animal Planet logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved.
www.animalplanet.com

©2010 MerchSource, LLC. All rights reserved.
Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

For customer support, please visit
www.msccustomer care.com or call 1-800-374-2744.

Printed in China